

Operating the S&G 2740B Electromechanical Safe Lock Transcript

The purpose of this video is to demonstrate how to dial a combination to open the S&G 2740B electromechanical safe lock. The S&G model 2740B electromechanical safe lock is shipped from the factory in single user mode with a factory shipping combination of 50-25-50. This combination is used to access the lock and change the combination. You are required to set the lock to your own unique combination before storing classified materials in the security container.

Dialing Notes:

If you overshoot a number, **DO NOT** stop and back up to it. Continue rotating the dial for an extra turn in the same direction, then stop on the desired number. The dial can be rotated more than the minimum number of rotations for the entry of any combination number.

If you stop dialing for more than 10 seconds, the lock will reset, forcing you to begin the combination entry sequence all over again.

If more than 10 incorrect combinations are entered in a row, the S&G model 2740B electromechanical safe lock will shut down for a period of 10 minutes.

Opening the Lock in Single User Mode

STEP 1: Turn the dial left, or counterclockwise, at least two complete revolutions. Stop precisely on the first number of the combination. If you overshoot the desired number **do not** back up, simply turn the dial an extra revolution in the same direction then stop on the combination number.

STEP 2: Turn the dial right, or clockwise, stopping when the second number of the combination comes into view. If you pass the second number, keep turning the dial in the same direction then stop on the number.

STEP 3: Turn the dial, stopping when the third number of the combination comes into view. If you dial past the intended number, keep dialing in the same direction then stop on the desired number.

STEP 4: Turn the dial to the right or clockwise. If you have entered your combination correctly, the dial will come to a positive stop before you have turned more than one and one-half revolutions.

Notes: If the lock emits 10 beeps upon opening, both lock batteries must be changed. The 10 beep low battery symbol will repeat every 20 seconds for one minute after the lock dial is opened.

Lock the S&G 2740B by turning the dial left, or counterclockwise at least half of one rotation, or approximately 50 numbers.

This completes the video for opening the S&G 2740B.